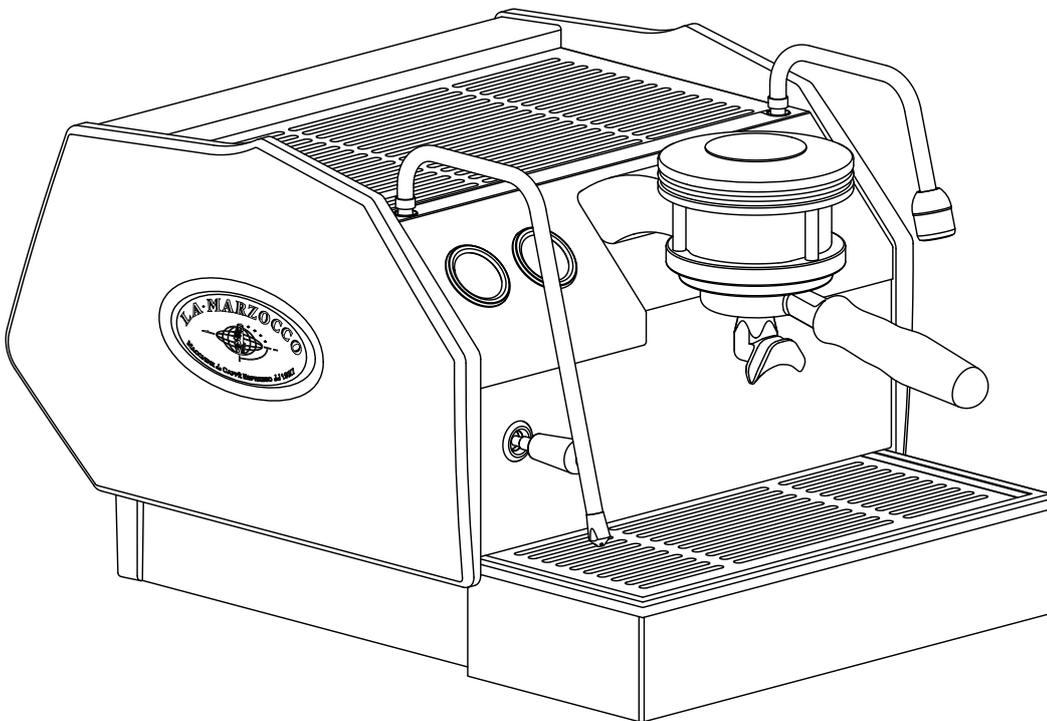




HANDMADE IN FLORENCE



GS/3

SOFTWARE PROGRAMMING GUIDE



Programming Introduction

Programming Keypad	2
Digital Display	2

Accessing Programming Mode

Programming Mode	3
------------------------	---

Initial Installation

Initial Installation	4
----------------------------	---

Start Up Procedures

Turning the Espresso Machine On	5
---------------------------------------	---

Shut Down Procedures

Turning the Espresso Machine Off	6
--	---

Quick Access Programming (Quick Keys)

Quick Keys.....	7
-----------------	---

“Machine OFF” Programming

Language	9
Name	10
Heating (Power Mode).....	11
Water Reservoir (Tank).....	12
Tea Water.....	13
Steam Boiler Probe Sensitivity	14
Service Cycles	15
Temperature Measurement Units	16
Proportional, Integral, Derivative (PID) Settings (Coffee Boiler)	17
Proportional, Integral, Derivative (PID) Settings (Steam Boiler)	18
PID Setting.....	19
Coffee Boiler Temperature Offset	20
Steam Boiler Temperature Offset.....	21
Water Filter Alarm	22

“Machine ON” Programming

Water Volume Programming.....	23
Clock Adjust	24
Auto ON/OFF	25
Coffee Boiler Temperature	26
Steam Boiler Temperature	27
Pre-Infusion or Pre-Brewing	28
Service Phone	29
Cronos Function	30

Troubleshooting

Alert Messages	31
----------------------	----

Description

- This espresso machine has a very powerful CPU and many configurable settings.
- Additionally, there are many feedback controls employed in this espresso machine to troubleshoot problems should they occur.
- The following is a brief introduction to the controls and display and how they interact with the operator.

Digital Display



The digital display (display) is a backlit display capable of displaying 2 lines of 16 characters. The display enables the operator to interact with the espresso machine to visibly change parameter values. The display also provides valuable information to the operator. There are several warnings that can be displayed to alert the operator of an unusual condition or a fault. Additionally, simple messages are displayed alerting the operator that an action has been started.

Programming Keypad



The keypad has two functions. The first is for control of the espresso machine. The second is for programming individual software parameters.

The  and  buttons are used to change the values of the individual parameters. The label for these buttons are “Espresso” and “2 Espresso” respectively.

The  button is used to access certain parameters and for advancing the cursor within a parameter. The label for this button is “Coffee”.

The  button is currently not used in programming mode. The label for this button is “2 Coffees”.

The  button is used to access the programming mode. This button is also used as a function key and to scroll through parameters. The label for this button is “Continuous”.

The  button is used to turn on and turn off the espresso machine and to activate the dispensing of the Tea Water

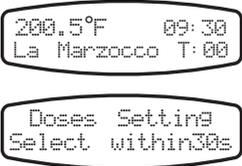


Programming Mode

Description

- To change the values of any parameter the operator must first enter into the programming mode.
- There are two levels within the programming mode that allow the programming of specific parameters.
- The two programming levels are as follows
 - *Machine "On"* - The parameters contained within this level are ones the operator can change to affect the quality of the espresso.
 - *Machine "Off"* - The parameters contained within this level are ones the operator can change to affect the performachine of the espresso machine. These parameters are set at the factory and there is no need for adjustment. La Marzocco reccomends that no changes are made at this level.

English

Display	Operating Procedure
	<p style="text-align: center;">Machine On Programming Level</p> <ol style="list-style-type: none"> 1 While the espresso machine is on, press and hold the  button. After approximately 5 seconds the following display appears. 2 This is the "Machine On" programming level. To program the dispense volume for each button see "Water Volume Programming". To access the "Machine On" programming mode press the  button. Note: You must scroll to the end to exit programming mode.
	<p style="text-align: center;">Machine Off Programming Level</p> <ol style="list-style-type: none"> 1 While the espresso machine is off, press and hold the  button. After approximately 5 seconds the following display appears. 2 This is the "Machine Off" programming level. Press the  button to scroll through the available parameters. Note: You must scroll to the end to exit programming mode.

Initial Installation

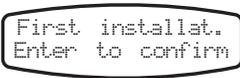


Initial Installation

Description

- This is the initial display shown when first installing this espresso machine.
- NOTE: If machine has been bench tested by your local distributor you will not see this first display.

NOTE: Prior to turning on the espresso machine, please read the Installation Guide

Display	Operating Procedure
	<p>1 Press the  button confirm that this in the initial installation of this espresso machine.</p>
	<p>2 Please refer to the section “Turning the Espresso Machine On” to continue</p>



Turning the Espresso Machine On

Description

- The following is the procedure for turning on the power to the espresso machine.
- Please follow the procedures carefully to avoid any damage to the espresso machine.

NOTE: If the message “First Installat. Enter to confirm” appears in the display, please see the preceding page entitled “Initial installation”

English

Display	Operating Procedure
	<p>1 Turn the Main Switch to the On position.</p>
	<p>2 The message at left will be displayed briefly. This message indicates the revision level of the software installed in this espresso machine. Then the following message is displayed.</p>
	<p>3 To complete the turn on process, press the button and the display at left is shown. The machine begins to automatically fill the steam boiler until full. When the espresso machine reaches operating temperature, all keypad lights will light indicating that the espresso machine is ready to use.</p>

NOTE: Ensure all air is removed from the group prior to starting the espresso machine. This only needs to be completed once during the initial setup or when water is drained from the coffee boiler.

WARNING

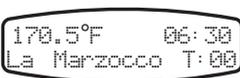
HAZARDOUS VOLTAGE DISCONNECT FROM POWER SUPPLY BEFORE SERVICING



Turning the Espresso Machine Off

Description

- The following is the procedure for turning off power to the espresso machine.
- Please follow the procedures carefully to avoid any damage to the espresso machine.
- This machine has two off settings. One setting turns off all of the components in the espresso machine and the other turns off power to the complete espresso machine.

Display	Operating Procedure
	<p>1 The following is the procedure for safely turning off the espresso machine.</p>
	<p>2 Press and hold the  button then press the  button. The display changes to the following:</p>
	<p>3 This is the OFF setting used in the normal operating conditions.</p>
	<p>4 During servicing or other conditions that warrant, the main switch should be turned to the OFF position.</p> <p>The espresso machine is off and display should be blank. It is important to follow this procedure when turning off the machine. Failure to do so can damage the electronics.</p>

WARNING

HAZARDOUS VOLTAGE DISCONNECT FROM POWER SUPPLY BEFORE SERVICING

English



Quick Keys

Description

- For convenience, there is access to 4 parameters of the software without entering program mode.
- These parameters are accessed through the use of "Quick Keys".
- To use the Quick Keys, first the function button is pressed and then the quick key is accessed.
- In the current version of the software (ver 1.09) the following quick keys are available:

Quick Key Number	Function
1	n/a
2	Coffee Boiler Temperature
3	Steam Boiler Temperature
4	Pre-Brewing enable
6	Machine Off function

Display	Operating Procedure
	<p>Quick Key 1 Press and hold the button, then press the button.</p>
	<p>Quick Key 2 Press and hold the button, then press the button.</p>
	<p>Quick Key 3 Press and hold the button, then press the button.</p>
	<p>Quick Key 4 Press and hold the button, then press the button.</p>
<p>NOTE: Quick Keys only function when the espresso machine is on and operating</p>	

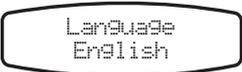
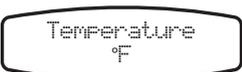


Language

Description

- This parameter allows the operator to change the language of the display.

English

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Press the  button or the  button to change the language.</p>
	<p>3 When finished, press the  button to continue to the next parameter.</p>

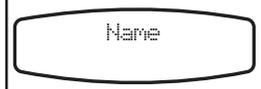
“Machine OFF” Programming



Name

Description _____

- This parameter allows the technician to program a 16 character user name.
- The user name is displayed continuously on the display on the second line.
- The user name is not displayed when the Crono Function is ENABLED.

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value of the flashing parameter.</p>
	<p>4 Press the  button to advance to the next character. Repeat step 3-4 to program remaining characters</p>
	<p>5 When finished, press the  button to continue to the next parameter.</p>

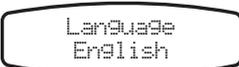
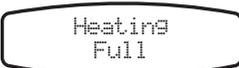


Heating (Power Mode)

Description

- This espresso is equipped with a power saving feature that allows the espresso machine to operate at lower power if needed.
- While in power saving mode you may experience slightly longer steam recovery time. The steam boiler pressure/temperature may be adjusted to compensate for this if needed.
- There are two options in Power saving mode:
 - Full - This mode gives full power to both the coffee boiler and the steam boiler.
 - Half - In this mode the power is alternated between the coffee boiler and the steam boiler.

English

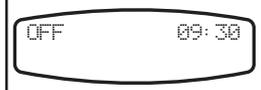
Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value between Half and Full.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>



Water Reservoir (Tank)

Description

- This parameter allows the user to choose the use of a water reservoir. If the espresso machine is connected directly to the water supply, then this value should be set to “not present”.

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value between Present and Not Present.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>

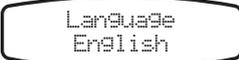
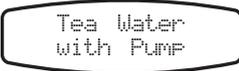


Tea Water

Description

- This parameter allows the technician to select the activation of the water pump during hot water dispensing.
- When hot water is drawn from only the steam boiler this parameter should be set to “without pump”
- If the optional adjustable temperature hot water dispense valve is installed, this parameter is set to “with pump”.

English

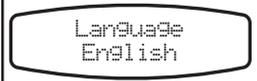
Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change to either “with Pump or “without Pump”.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>



Steam Boiler Probe Sensitivity

Description

- This parameter allow the user to set the probe sensitivity depending of the hardness of the water

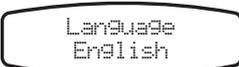
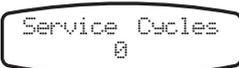
Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value between Low, Mid and High.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>



Service Cycles

Description

- This parameter allows the user to program a threshold number of cycles when the machine prompts for service.
- When Prompted for Service, the “Service Phone” number will be displayed.

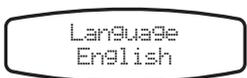
Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value (range =9999).</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>



Temperature Measurement Units

Description

- This parameter is set at the factory at the request of the local distributor.
- This parameter has two options Celsius (°C) or Fahrenheit (°F)

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value to either Celsius (°C) or Fahrenheit (°F).</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>

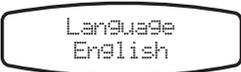
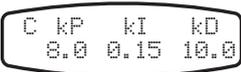


Proportional, Integral, Derivative (PID) Settings (Coffee Boiler)

English

Description

- This parameter is preset at the factory based upon theoretical calculations and physical experiments.
- It is not recommended that these numbers are changed.
- Changes to these parameters can cause unexpected results.
- Qualified technicians may wish to experiment with different values.
- It is important to write down the values before making changes to be sure you can return to the factory programming if unexpected results occur.
- The factory default values are listed in the display graphic above

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value of the flasing parameter.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>

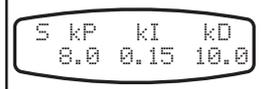
“Machine OFF” Programming



Proportional, Integral, Derivative (PID) Settings (Steam Boiler)

Description

- This parameter is preset at the factory based upon theoretical calculations and physical experiments.
- It is not recommended that these numbers are changed.
- Changes to these parameters can cause unexpected results.
- Qualified technicians may wish to experiment with different values.
- It is important to write down the values before making changes to be sure you can return to the factory programming if unexpected results occur.

Display	Operating Procedure
	1 Enter into “Machine Off” programming mode.
	2 Scroll through the displayed parameters using the  button until the following display appears:
	3 Press the  or the  button to change the value of the flasing parameter.
	4 When finished, press the  button to continue to the next parameter.

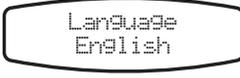
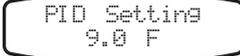


PID Setting

Description

- This parameter sets a range in which the PID algorithm is active.
- This parameter is preset at the factory based upon theoretical calculations and physical experiments.
- It is not recommended that this number is changed.
- Changes to this parameter can cause unexpected results.
- It is important to write down the number before any changes are made to make sure you can return to the factory programming if unexpected results occur.
- Experienced technicians may wish to experiment with different values.
- The lowest value for this parameter is 3.6.

English

Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value of the parameter.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>

“Machine OFF” Programming



Coffee Boiler Temperature Offset

Description

- This parameter is used to calibrate the coffee boiler temperature system to ensure the display temperature accurately represents the temperature of the water exiting the group head.
- This parameter is preset at the factory based upon initial tests of this espresso machine.
- It is not recommended that this number is changed.
- Changes to this parameter can cause unexpected results.
- It is important to write down this value before making changes to be sure you can return to the factory programming if unexpected results occur.

Display	Operating Procedure
	1 Enter into “Machine Off” programming mode.
	2 Scroll through the displayed parameters using the button until the following display appears:
	3 Press the or the button to change the value of the parameter.
	4 When finished, press the button to continue to the next parameter.

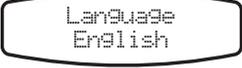
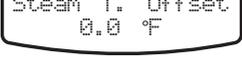


Steam Boiler Temperature Offset

Description

- This parameter is used to calibrate the steam boiler temperature system to ensure accuracy.
- This parameter is preset at the factory based upon initial tests of this espresso machine.
- It is not recommended that these numbers are changed.
- Changes to this parameter can cause unexpected results.
- It is important to write down this value before making changes to be sure you can return to the factory programming if unexpected results occur.

English

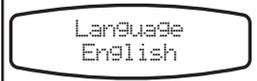
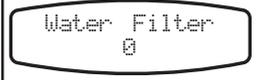
Display	Operating Procedure
	<p>1 Enter into “Machine Off” programming mode.</p>
	<p>2 Scroll through the displayed parameters using the  button until the following display appears:</p>
	<p>3 Press the  or the  button to change the value of the parameter.</p>
	<p>4 When finished, press the  button to continue to the next parameter.</p>



Water Filter Alarm

Description

- This parameter allows the technician to preprogram an alarm that notifies the user when the water filter requires service or replacement.
- When the programmed volume of water has passed through the espresso machine the error message “Change Filter” is displayed.
- A value of 0 (zero) disables the filter alarm parameter.

Display	Operating Procedure
	1 Enter into “Machine Off” programming mode.
	2 Scroll through the displayed parameters using the  button until the following display appears:
	3 Press the  or the  button to change the value of the parameter.
	4 When finished, press the  button to continue to the next parameter.
	5 When the espresso machine has dispensed the value of this parameter the message “Filter Alarm” will appear.
	NOTE: To reset this message turn off the espresso machine using the main power switch. Then, press and hold the  button and the  button and turn on
	the machine using the main power switch. Hold both buttons until the following message appears. Release both buttons and continue to use the espresso machine as normal.



Water Volume Programming

Description

- This parameter allows the operator to program the water volume (shot volume) for the individual buttons on the keypad.
- The saved program is a number. This number relates to the number of pulses the flowmeter delivers to the CPU. Once the programmed number of pulses is received by the CPU, the flow of water is stopped.

English

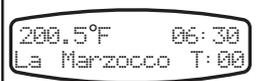
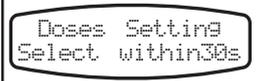
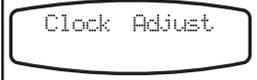
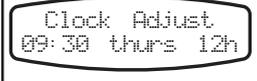
Display	Operating Procedure
	<ol style="list-style-type: none"> <li data-bbox="395 1153 973 1187">1 Enter into “Machine On” programming mode. <li data-bbox="395 1249 853 1283">2 Press one of the following buttons: <div data-bbox="539 1294 829 1361" style="text-align: center;"> </div> <li data-bbox="395 1384 1500 1473">3 Water will begin to flow. When the desired amount of water has been dispensed, press the same button again to stop the flow of water. The button is now programmed. Repeat this process for subsequent buttons.



Clock Adjust

Description

- This parameter allows the user to set the time of day and the day of the week.
- This parameter is used to display time and is also used by the “Auto On/Off” parameter
- There are 4 changeable values within this parameter:
 - Hour
 - Minute
 - Day of week
 - Hour Format 12h or 24h

Display	Operating Procedure
	1 Enter into “Machine On” programming mode.
	2 Press the  button to enter into programming mode.
	3 Then press the  button to access the adjustable parameters.
	4 Press the  or the  button to change the value of the flashing parameter.
	5 Press the  button to advance to the next value.
	6 When finished, press the  button to continue to the next parameter.



Auto ON/OFF

Description

- This parameter allows the user to program the espresso machine to turn on at a preset time and turn off at a preset time.
- This feature also allows the espresso machine to remain in the off condition for one repeating closed day.

Display	Operating Procedure
	<p>1 Enter into “Machine On” programming mode.</p>
	<p>2 Press the  button to enter into programming mode</p>
	<p>3 Then press the  button to access the adjustable parameters.</p>
	<p>4 Press the  or the  button to change the value of the flashing parameter.</p>
	<p>5 Press the  button to advance to the next value.</p>
	<p>6 When finished, press the  button to continue to the next parameter.</p>



Coffee Boiler Temperature

Description

- This parameter is set at the factory at a preset nominal temperature.
- The temperature of the boiler is measured at the most critical point in the boiler where temperature fluctuation is the greatest.
- The temperature of the water exiting the group head is held constant by means of the mass of the group casting. Even though the temperature of the boiler may vary slightly, the temperature of the water exiting the group is constant.
- To properly calibrate the temperature of any espresso machine it is import to measure the temperature of the water exiting the group by means of an external temperature measuring device. The difference of the display temperature and the measured temperature may be compensated by use of the “Coffee T. Offset” parameter.

Display	Operating Procedure
	1 Enter into “Machine On” programming mode.
	2 Press the button to enter into programming mode
	3 Then press the button to access the adjustable parameters.
	4 Scroll through the displayed parameters using the button until the following display appears: 5 Press the or the button to change the value of the parameter.
	6 When finished, press the button to continue to the next parameter.
	NOTE: It is also possible to change the temperature of the coffee boiler using the “Quick Keys”. Please see the section titled “Quick Keys”

DANGER

THE STEAM BOILER CONTAINS WATER AT ELEVATED TEMPERATURES. WATER TEMPERATURE OVER 125 °F CAN CAUSE SEVERE BURNS INSTANTLY OR DEATH FROM SCALDING.

English



Steam Boiler Temperature

Description

- This parameter is set at the factory at a preset nominal temperature.
- The temperature of saturated water is proportional to the pressure inside the Steam Boiler. Therefore it is possible to regulate the pressure of the steam boiler by means of electronic temperature control. Please use the following tables as reference when setting the steam boiler temperature.

Temperature	Pressure
247°F/119°C	1.0 bar
260°F/127°C	1.5 bar
272°F/133°C	2.0 bar

CAUTION

The saturation temperature of water will vary with ambient atmospheric pressure. Tables in this manual are created for atmospheric pressure at sea level. Slight adjustment in temperature will be required for elevations other than sea level.

Display	Operating Procedure
	1 Enter into “Machine On” programming mode.
	2 Press the button to enter into programming mode
	3 Then press the button to access the adjustable parameters.
	4 Scroll through the displayed parameters using the button until the following display appears: 5 Press the or the button to change the value of the parameter.
	6 When finished, press the button to continue to the next parameter.

NOTE: It is also possible to change the temperature of the steam boiler using the “Quick Keys”. Please see the section titled “Quick Keys”

DANGER

THE STEAM BOILER CONTAINS WATER AT ELEVATED TEMPERATURES. WATER TEMPERATURE OVER 125 °F CAN CAUSE SEVERE BURNS INSTANTLY OR DEATH FROM SCALDING.

English



Pre-Infusion or Pre-Brewing

Description

- This parameter allows the user to enable or disable the pre-brewing (also called pre-infusion) function.
- When enabled the user is able to program buttons 1-4. Each button may have different programming.
- Pre-brewing has two values to adjust for each button. “ON” time is the amount of time (in seconds) that the brew valve is open during during the pre-brewing cycle. “OFF” is the amount of time (in seconds) that the brew valve is off during the pre-brewing cycle. After the pre-brewing cycle has completed, the normal brew cycle continues until complete.

Display	Operating Procedure
	1 Enter into “Machine On” programming mode.
	2 Press the button to enter into programming mode
	3 Then press the button to access the adjustable parameters.
	4 Scroll through the displayed parameters using the button until the following display appears: 5 Press the or the button to enable or disable this parameter.
	6 When enabled, additional parameters are displayed. Press the or the button to change the value.
	7 When finished, press the button to continue to the next parameter. Repeat steps 6-7 for all 4 buttons. A value of zero disables this feature on the corresponding button.
<p>NOTE: It is also possible to enable and disable this parameter using the “Quick Keys”. Please see the section titled “Quick Keys”</p>	



Service Phone

Description

- This parameter is a feature that can be used to store the telephone number for a service company.
- This telephone number will be displayed when service is required.

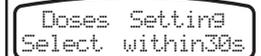
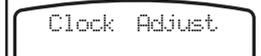
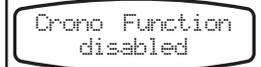
Display	Operating Procedure
	<p>1 Enter into “Machine On” programming mode.</p>
	<p>2 Press the button to enter into programming mode</p>
	<p>3 Then press the button to access the adjustable parameters.</p>
	<p>4 Scroll through the displayed parameters using the button until the following display appears:</p>
	<p>5 Press the or the button to change the value of the flashing parameter.</p>
	<p>6 Press the button to advance to the next character. Repeat step 5-6 to program remaining characters</p>
	<p>7 When finished, press the button to continue to the next parameter.</p>



Cronos Function

Description

- When enabled, this parameter displays a timer that times each shot.
- The timer is reset each time a button on the keypad is pressed.
- When enabled, the Crono Function is continuously displayed. The programmable name will not be displayed when this parameter is enabled.

Display	Operating Procedure
	<p>1 Enter into “Machine On” programming mode.</p>
	<p>2 Press the  button to enter into programming mode</p>
	<p>3 Then press the  button to access the adjustable parameters.</p>
	<p>4 Scroll through the displayed parameters using the  button until the following display appears:</p> <p>5 Press the  or the  button to enable or disable this parameter.</p>
	<p>6 When finished, press the  button to continue to the next parameter.</p>

Alert Messages

- This espresso machine is equipped with several feedback mechanisms that alert the operator when an unusual condition occurs. Additionally the espresso machine will warn the operator when certain parameters fall below or above the programmed point. These errors and warnings will appear as a message in the display.
- The following section will describe errors and warnings that may appear in the display

Message	Description	Remedy
First installat. Enter to confirm	This is the first installation of the espresso machine and the CPU is asking for verification of this event.	Press the ENTER button on group 1 keypad to confirm. Then will initialize the CPU and boot the electronics.
Coffee boiler filled?	This message is displayed after the boilers have been drained. The CPU is verifying that the coffee boiler is full.	Fill the coffee boiler with water (see operating manual for detailed instructions). Ensure that all air is bled from the coffee boiler using the air bleed screw atop each group casting. The CPU will display this message to ensure that the coffee boiler is full before supplying power to the coffee boiler heating element.
Corrupted Data	This message is displayed when the CPU does not understand an instruction.	Most likely the machine power was disconnected with out first turning off the machine through the keypad and display. Turn off machine using main switch to cycle power on and off. This should clear the error
Filling-up in progress	This message is displayed when the steam boiler autofill cycle is activated and water is entering the steam boiler.	No action is required when this message is displayed. This message is only displayed to notify the operator of the active process.
Filling-up Alarm	This message is displayed when the CPU does not detect a full signal from the steam boiler within the set time interval.	When this message is displayed the CPU also shuts down and turns off power to the machine (see the parameter "Level Timeout"). Press the ON/OFF button to reset this error.
Steam Boiler Empty	This message is displayed when the CPU does not receive a signal from the Safety Probe in the steam boiler.	When this message is displayed the CPU turns off power to the steam boiler heating element. The only way to reset this error is to repair the Safety Probe to restore the signal to the CPU or fill the steam boiler with water.
Steam Boiler Temperature	This message is displayed when the steam boiler temperature exceeds the maximum allowed temperature.	When this message is displayed call an authorized service technician to repair this fault. The also CPU turns power off to the steam boiler.
Floumeter Alarm	This message is displayed when the CPU does not receive the appropriate signal from the flowmeter.	When the flowmeter alarm is displayed, the light on the corresponding button that initiated the brew cycle will begin to flash. This problem is a result of water not flowing through the flow meter. This can be caused by the coffee packed too tightly, a blockage in the tubes, a malfunctioning water pump, a faulty valve, or a damaged flowmeter. Call a service technician to fix this problem.
Coffee Boiler Heating	This message is displayed when the coffee boiler does not reach the minimum temperature with the programmed time interval.	See the parameter "Heating Timeout" for more information.
Coffee Boiler Temperature	This message is displayed when the coffee boiler temperature exceeds the maximum allowed temperature.	If this happens call an authorized service technician to repair this fault. When this message is displayed the CPU turns power off to the coffee boiler displayed.



HANDMADE IN FLORENCE



LA MARZOCCO, *S.r.l.*

VIA BOLOGNESE 68 PIAN DI SAN BARTOLO, 50010 FIRENZE, ITALY

TEL: +39.055.401.390 FAX: +39.055.401.349

EMAIL: INFO@LAMARZOCCO.COM

WWW.LAMARZOCCO.COM